5. Specification

ITEM	CLAYMORE mini (1 Cell)		
Model No.	CL-350(WH/WA)		
LED CCT (optional)	White (5,700K) / Warm (3,500K)		
Brightness (Lumen)	100Lm~350Lm		
Using time (hrs)	3 step	2 step	1 step
	6hrs	12hrs	24hrs
Size (mm)	85×66×27mm		
Weight (g)	112g		
Rechargeable Battery (pcs)	3,000mAh		
Charging time (hrs)	5hrs		
INPUT	USB 5V 800mA		
Origin	MADE IN KOREA		

6. LED Color Temperature

* WH (White) : High color temperature (5,700K), feels cool like fluorescent light
* WA (Warm) : Low color temperature (3,500K), feels warm like normal gas lantern

7. Packages

① LED lantern ② Hanger ③ micro 5 pin cable ④ Case ⑤ Manual

※ Caution when storing

* Please 100% charging when storing long time.
* Storing -10°C could affect the life span of battery so please care for that when storing.
* Please store in dry place.

Warranty

Item	CLAYMORE mini
Model No.	CL-350
Seller	
Date of Purchase	

1. Thank you for purchasing CLAYMORE series of Prism Co., Ltd.
2. This product has passed strict quality control and testing process. When you find some inappropriate working on the product, please contact authorized service center as below.

Free Service

1) Failure of the product under normal operating conditions during the warranty period may be repaired by Prism or authorized service center free of charge. Some shipping or handling charges may be involved.
2) Warranty period: 2 years

Charged Service

1) Damage caused when the warranty period is over
2) Damage caused due to the user's mishandling, abuse, or improper operation
3) Damage caused by arbitrary or personal repair or disassemble other than authorized service center
4) Damage from input electricity or cable defect
5) Damage caused by natural disaster

Manufacturer

Prism Co., Ltd. www.prismlight.co.kr
101-1501, Chunui-Technopark, Bucheon-ro 198 Road, 36,
Wonmi-gu, Bucheon-si, Gyeonggi-do, Korea (420-857)
TEL: +82-32- 652-2207 FAX: +82-32-652-4405

Service Center

Please contact Prism dealer or service center
Prism Co., Ltd. www.prismlight.co.kr
101-1501, Chunui-Technopark, Bucheon-ro 198 Road, 36,Wonmi-gu, Bucheon-si, Gyeonggi-do, Korea (420-857) TEL: +82-32- 652-2207 FAX: +82-32-652-4405

User Manual

CLAYMORE® MINI

- **Ultra light weight camping (back packing) lantern**
- **Multi functional handle wire**
- **Battery indicator / SOS-flash function**
- **Made in Korea LED packages of LG innotekk**
- **Rechargeable Li-ion batteries of Samsung SDI**

INSTRUCTIONS

Thank you for purchasing the CLAYMORE outdoor lantern. This product is portable lantern including Li-ion rechargeable battery. Before using the lantern, please make sure that you read through these operating instructions to ensure that you will use the lantern correctly. If you find trouble, please contact Prism dealer or service center.

1. Caution

① Do not place near any heat sources or in direct sunlight.
② This product is not water-proof item. Do not use at any location where liquids are present or touch electrical appliances with wet hands.
③ Do not place or use near heated vehicles exposed direct sunlight.
④ It's hot when it's working so please grab handle wire and move.
⑤ Do not use under and over the using temperature (-10℃~40℃).
⑥ Use only the supplied power adapter and cigar jack.
⑦ Keep away from baby or children for safety.
⑧ Monitor while children using the item.
⑨ Keep away metals from connectors and USB port.
⑩ Do not repair, disassemble, or modify under any circumstances.
⑪ Do not touch electrical appliances with wet hands.
⑫ Turn it off and place safety area when using is over.
⑬ Do not turn handle wire too much.
⑭ Take care not to fall or break on to the ground and not to be shocked.

2. Name of each part

Before using the lantern, please familiarize yourself with each part while referring to the figure below.

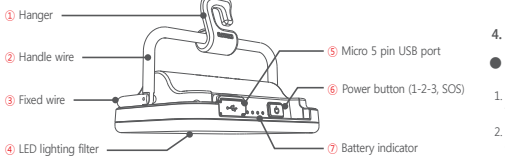

3. How to operate

● Charging the lantern

1. Connect USB cable to the charging port of the lantern body opening ⑤ the cover.
2. The ④battery indicator flickers in 4 steps when charging.

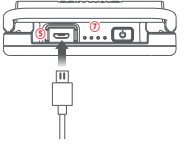

* All 4 indicators turn on when fully charged.

Battery indicator	Charging	
● ○ ○ ○	0~25%	Flickers
● ● ○ ○	25~50%	
● ● ● ○	50~75%	
● ● ● ●	75~100%	
● ● ● ●	Fully charged	Stops

● LED lantern function (On/off, Battery indicator, SOS-flash)

Push the ⑥ on/off button one by one with working 1st-2nd-3rd-off turn.



1) Battery indicator:
Push ⑥on/off button once to turn on and check 4 indicating LEDs show battery capacity.
2) SOS-flash: Push ⑥on/off button for over 2 seconds to flickers as Morse code term.
3) Clear the function: Push ⑥on/off button again to turn off the lantern.

4. How to install

● Lift up on the table or flat surface

1. You can place the lantern to necessary direction vertically or horizontally.
2. Turn the ②handle wire as shown for necessary direction to adjust optimal angle.

● Hang on the lantern hanger or string

1. ②Adjust the angle of handle wire to light for necessary direction.

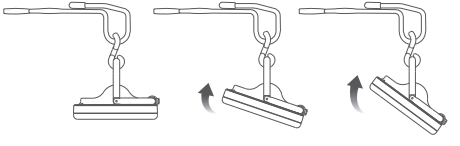

2. Slide ①hanger to light for necessary direction.

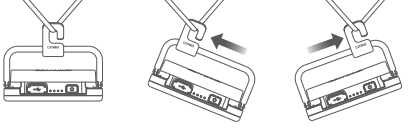

*Every specification or function can be modified by the situation of manufacturers.